



## Lucas PRS8

Switch Positions:

- **Position 1 (Off)** – No output
- **Position 2 (Park)** – Tail light, speedo light (pilot/parking lights)
- **Position 3 (Headlight)** – Headlight ON + tail light + speedo light

Wiring Terminals:

Terminal	Colour Code	Function
1	Brown/Blue	Power feed from battery (fused)
2	Red	To tail light & speedo light
3	Blue	To headlamp dip switch (main beam control)
4	Not always used	(optional parking circuit)
5	None or Earth	(sometimes used for parking light)

Please Check Negative Earth or Positive Earths.